

## Instructions for Fitting GS Tackle Deeper Mount v10 Thumbscrew to Actor Plus Bait Boat

The Deeper mount comes with all fixings required, this consists of the following:

- 1 x Mounting Body
- 1 x Sliding Collar
- 1 x Sliding Tube (Carbon Fibre or Aluminium, depending on what was purchased) assembled, with thumbscrew
- 1 x M4x22mm Countersunk Screw (pre-fitted into mounting body)
- 1 x M4 Square Nut (pre-fitted into mounting body)
- 1 x 2.5mm Allen Key (Hexagon Wrench)



### Mounting Instructions :

Firstly, remove the M4x22mm Countersunk screw and square nut from the mounting body using the supplied allen key, set aside for fitting.


The main body of the mount is designed to be mounted over the standard hook release system (this means you can no longer utilise the hook dropper, if the button is pressed nothing will happen and the mount won't be affected)

Once fitted the screw will pass through this hole indicated :



Please check there is no obstructions in the hole, if there is please screw the M4x22mm Screw into the hole – this should push out any moldings / rubbish from the hole.

Next slide the Main Body of the mount over the hook release :

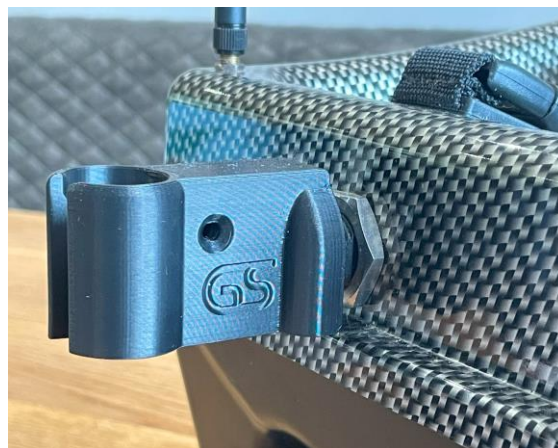

Slide it on until its fully seated against the hull of the boat, visually check the countersunk hole is aligned with the hole in the hook release.

Due to some molding variations of the hook release the body was designed to be tight up against the body – therefore there maybe up to ½ hole misalignment.

Push the M4x22mm screw into the hole by hand until it doesn't go any further, you normally then need to screw the screw through the hook release. Once the screw is nearly fully inserted, lick a finger and place the M4 Square nut on it, then place it into the square cutout on the other side of the mount.



Now take the supplied 2.5mm Allen Key and turn the countersunk screw whilst applying light pressure still to the nut :



### **IMPORTANT NOTE –**

**Do NOT overtighten the screw or you can damage the mount, also do not overtighten the screw without the mount being fitted to the boat.**

**The short side of the allen key is more than sufficient to tighten the bolt – as pictured.**

**Mounting the Deeper :**

Take the supplied thumbscrew assembly (Aluminium or Carbon) then slide the sliding collar on (please check orientation, the lip or largest part is at the top of the thumbscrew screw)

Next take your deeper and check the middle top screw hole is clear of debris –



Next tighten the assembly into the Deeper, holding the deeper with one hand and the thumbscrew with the other. The thumbscrew has been designed to apply enough force to sufficiently tighten the screw – please do not use a spanner or pliers on the thumbscrew or it will become damaged.

Once connected the sliding pieces can be left built up on the Deeper – for quick connection.



To fit the Deeper simply hold the sliding piece, and angle the deeper approx. 45 degrees, slide the tube through the opening of the bracket :



Then lower the sliding piece down whilst aligning the tab into the cut-out, press the sliding piece down (very slight click is felt).

To remove the deeper, it's a reverse order – put a finger into the slot to lift the tab up



Then slide it up, and angle it again to remove.



Thank you for your purchase, any problems please do not hesitate to contact me.